



AUTOMATIC TORTILLA RECEIVER

OPERATION'S MANUAL



The total or partial reproduction of this manual
is prohibited by any means, whether printed or electronic;
without the prior, express and written authorization of the author.

AUTOMATIC TORTILLA RECEIVER

OPERATION'S MANUAL

INDEX

GENERAL SAFETY INSTRUCTIONS.....	4
CAUTION.....	5
ELECTRICAL INSTALLATION.....	6
COMPONENTS.....	7
OPERATING INSTRUCTIONS.....	8
CLEANING.....	9

GENERAL SAFETY INSTRUCTIONS

WARNING: To reduce the risk of injury, read all instructions properly.

Failure to follow the instructions listed below can cause electric shock, fire, serious injuries, mutilation and/or damage to the equipment.

A. SAFETY IN THE WORK AREA.

- * Keep the work area clean and lit. Crowded or dark areas lead to accidents.
- * Keep children, customers and non-company personnel away from the electrical and mechanical operation area of the equipment.
- * It is recommended to have a minimum space of one meter or three feet around the machine for safety measure and to optimize work.

B. ELECTRICAL SAFETY.

- * Machinery connections must be adapted to the power outlets.
- * Do not use adapters for the switches: since you run the risk of receiving an electric shock.
- * Do not expose the switches and / or electrical connections to rain or humidity. If water enters these elements, there is a risk that they will break down or suffer an electric shock.
- * Use cable in a single piece, if there are joints in the connections these can produce a short circuit.
- * Do not expose cables or electrical connections to heat, oil, sharp edges, or moving parts, as damaged cables can cause electric shock or short circuit.

C. PERSONAL SAFETY.

- * Do not operate the equipment if you are tired, under the influence of alcohol or drugs.
- * Wear appropriate clothing, do not wear loose clothing, or necklaces, earrings, watches, if you have long hair wear a tie to keep it up.
- * Do not climb on the structure of the machine for any reason, falls or injuries may occur.
- * Avoid using headphones, cell phones or any other equipment that works as a distraction to the operator.
- * Make correct use of personal protective equipment if any maintenance is to be carried out on the machine.
- * If any change is made to the model or component of the equipment, be it electrical or mechanical related, it must be de-energized and stop the machine completely to avoid accidents.
- * Keep limbs away from all moving parts.

AUTOMATIC TORTILLA RECEIVER

OPERATION'S MANUAL

CAUTION

The following symbols indicate the safety measures that must be taken before and after starting up the equipment.



ELECTRICAL RISK In which you can suffer electric shocks, if you do not comply with the electrical safety provisions.

AUTOMATIC TORTILLA RECEIVER

OPERATION'S MANUAL

ELECTRICAL INSTALLATION

Verify that the electrical connection is 110v. Inspect that there are no short circuits, no loose or bare wires. Ensure that all cables are isolated and without contact, check contactors and switches in good condition. It is recommended to use a 12 gauge cable for the installation of the automatic receiver.




ELECTRICAL INSTALLATION	
A	220v electrical installation
B	12 gauge cable (conduit cable)

AUTOMATIC TORTILLA RECEIVER

OPERATION'S MANUAL

COMPONENTS

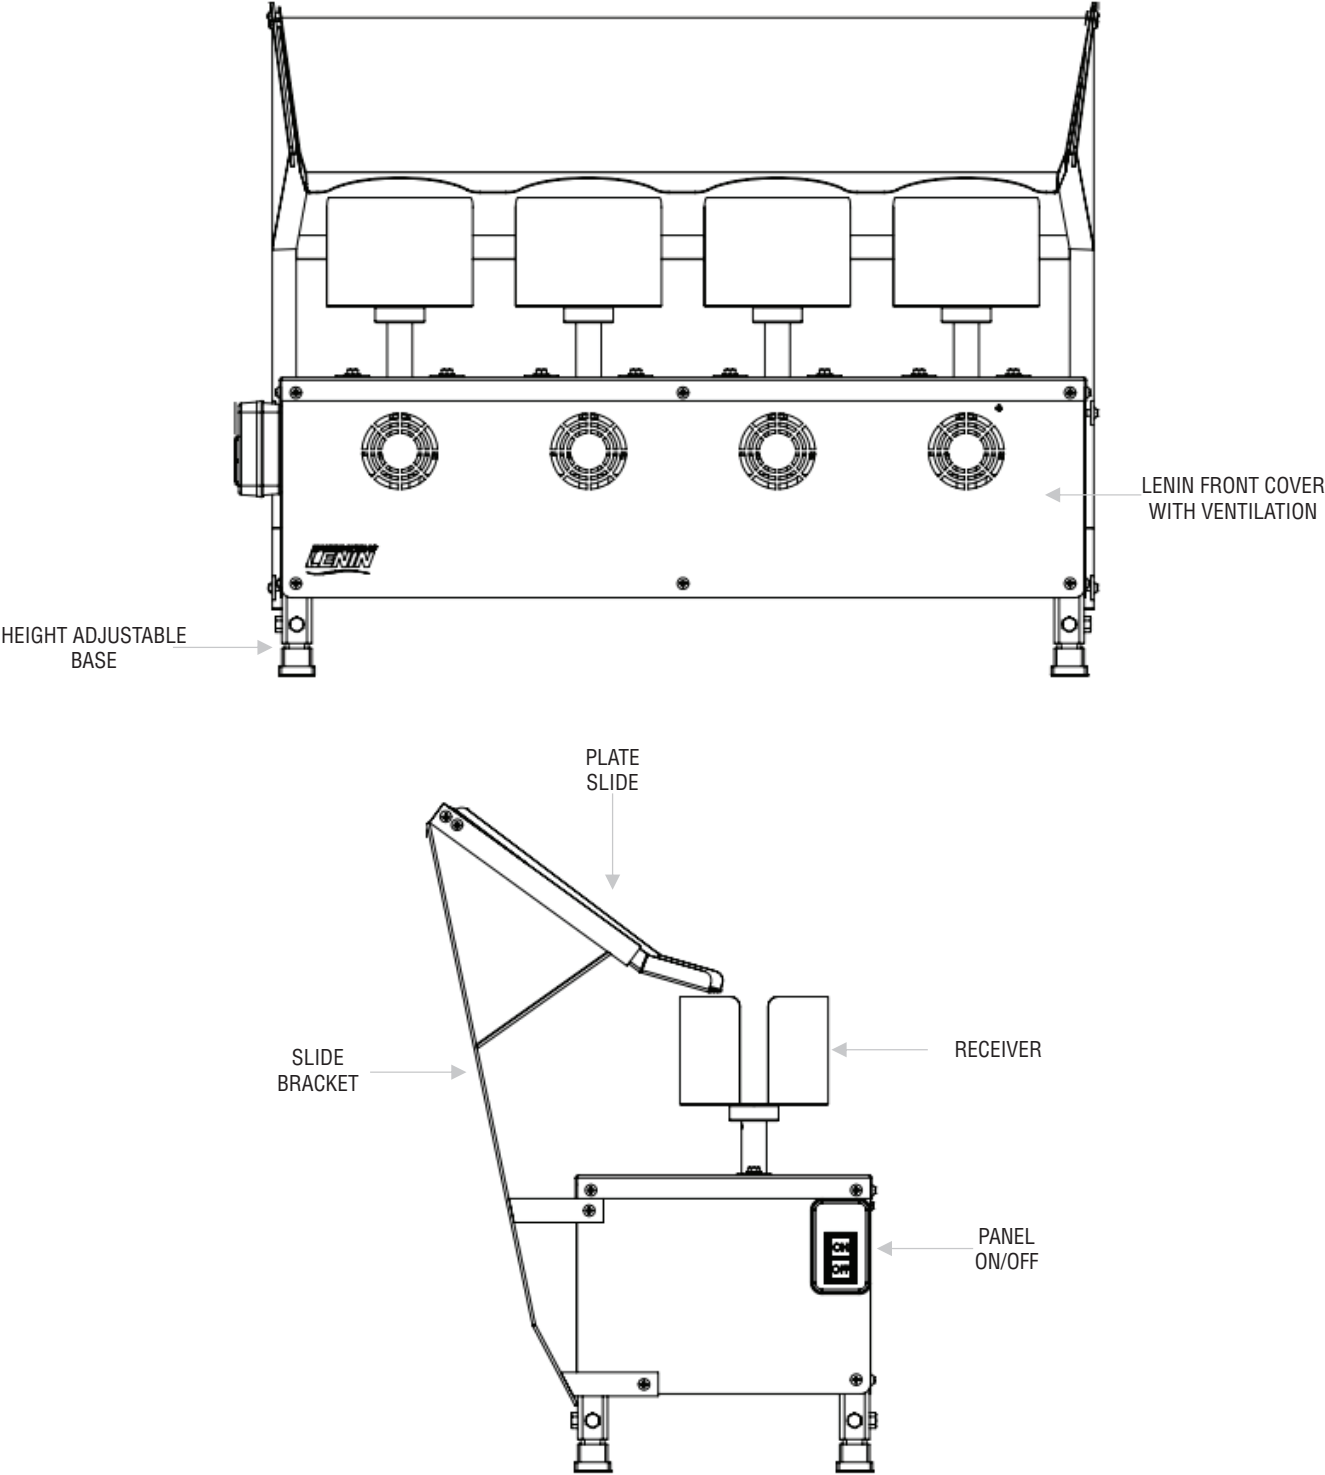

AUTOMATIC TORTILLA RECEIVER

OPERATION'S MANUAL



1 | Connect the receiver plug to 110V power



2 | Press power button (ON)



3 | Check vibration in receivers



4 | Inspection of tortilla drop in the automatic receiver



5 | Tortilla arrangement inspection



6 | Take tortillas

AUTOMATIC TORTILLA RECEIVER

OPERATION'S MANUAL



7

Place tortilla on table or shelf



8

Press OFF button

CLEANING PROCEDURE

WARNING: Cleaning the automatic receiver must be carried out with the machine completely stopped to avoid accidents such as crushing or mutilations.

AUTOMATIC RECEIVER CLEANING

1. With a damp cloth, clean the slider, receiver and plates exposed to the dough.

MAINTENANCE

The duration of the spare parts will depend on the preventive maintenance and care taken to the machine. The more frequent this maintenance is done, the parts will have a longer life.

If the electrical installation does not have voltage variations, short circuits or anomalies in the structure, the micromotors will have a long life.



HEADQUARTERS

AV. INDUSTRIAS #3655, ZONA INDUSTRIAL
CP 78395 SAN LUIS POTOSÍ, SLP. MÉXICO



444 127 11 80



444 129 29 79

info@manufacturaslenin.mx

MEXICANTORTILLAMACHINE.COM